




Hipstreet Equinox 2 Speaker Replacement

This guide shows how to replace defective speakers.

Written By: Joel Miller

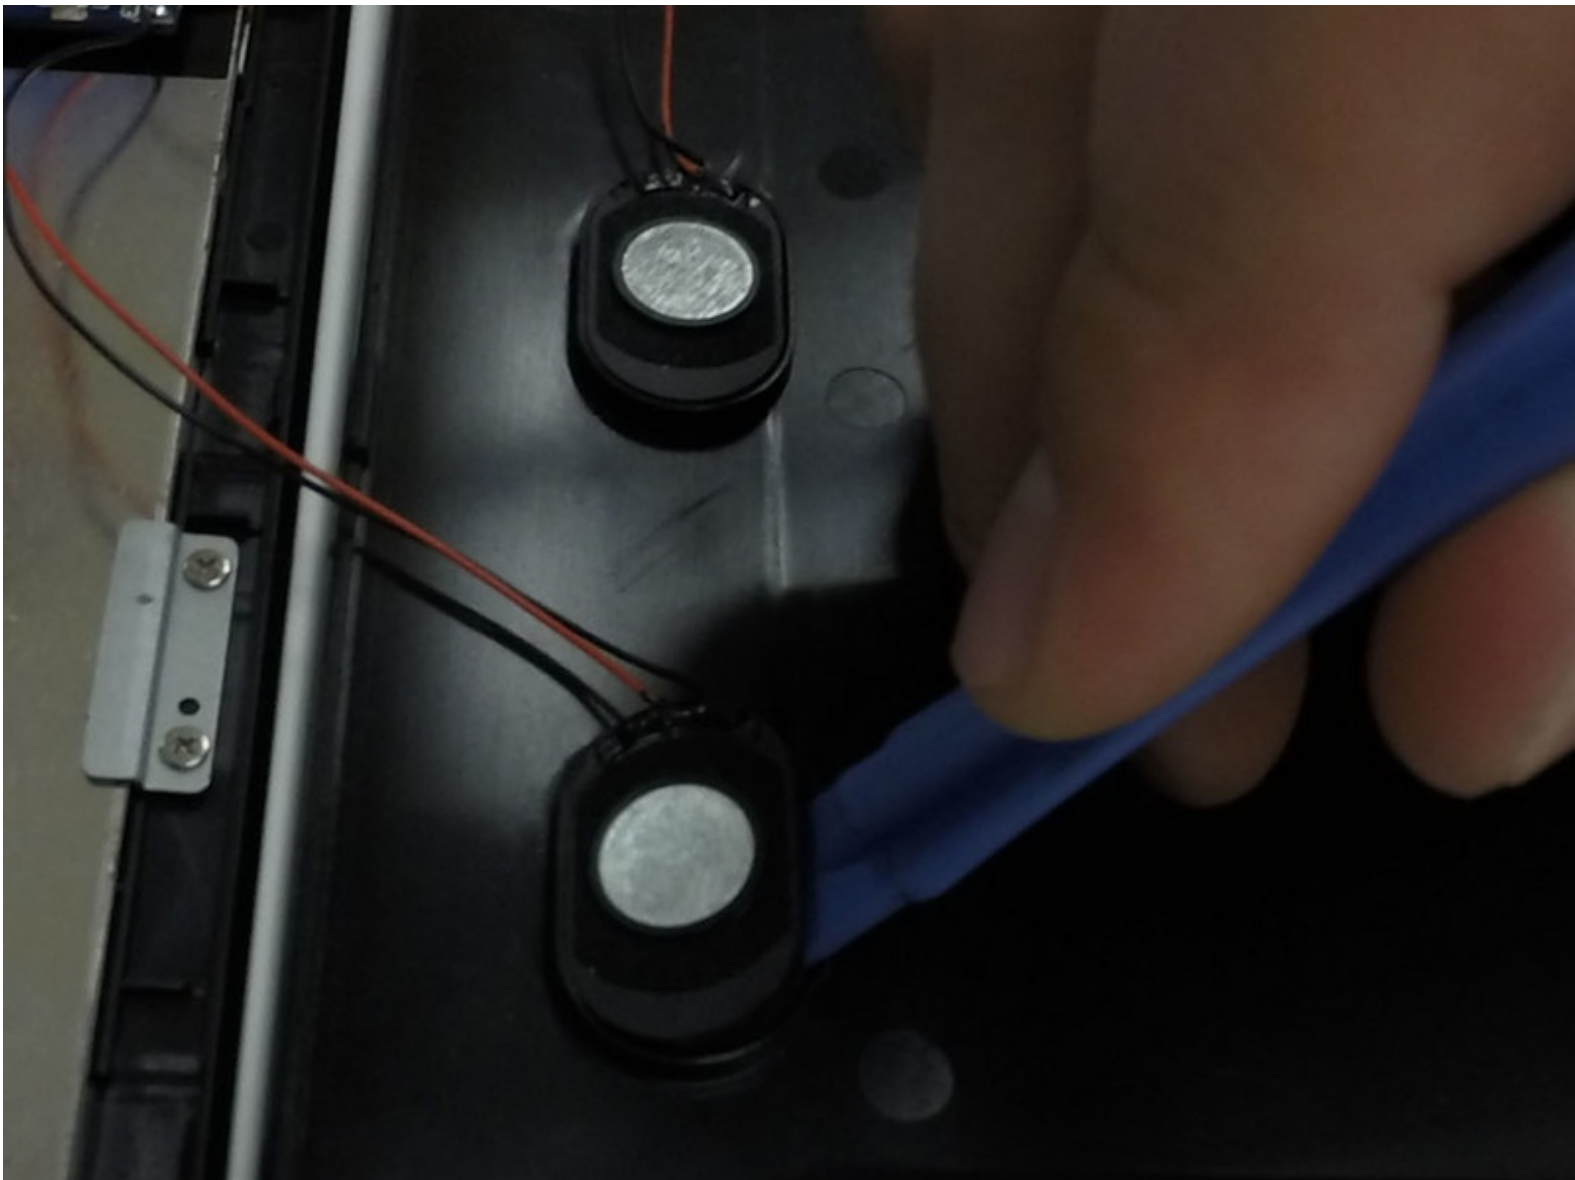

INTRODUCTION

The speakers could have been broken by playing audio files that have been altered to excessive volume levels, or maybe they got wet and broke apart. This guide explains how to change them out.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Soldering Station](#) (1)



PARTS:

- [Hipstreet Equinox 2 Speaker](#) (2)
- [Speaker Adhesive](#) (1)

Could use any thin adhesive

Step 1 — Rear Case



- Remove these two 3mm screws using a PH00 Screwdriver

Step 2




- Use the blue plastic opening tool to gently pry the back case off

Step 3 — Speaker




- Use a plastic opening tool to remove the speakers from the case.
- [Desolder](#) the wires from the motherboard.
- ⓘ Be sure to note which wire, red or black, corresponds to which connection on the motherboard.

Step 4

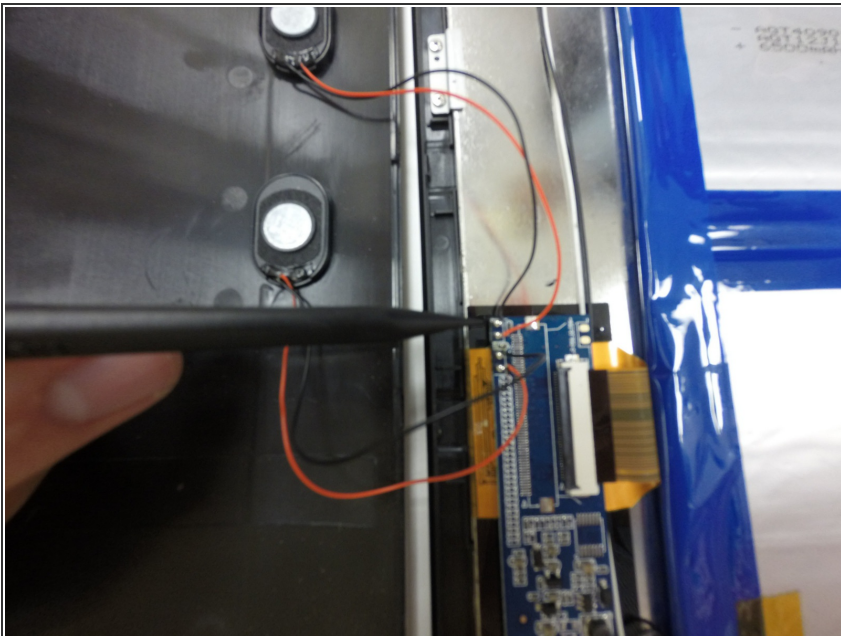

- [Solder](#) the wires of the new speaker to the motherboard as shown in the image.

Step 5

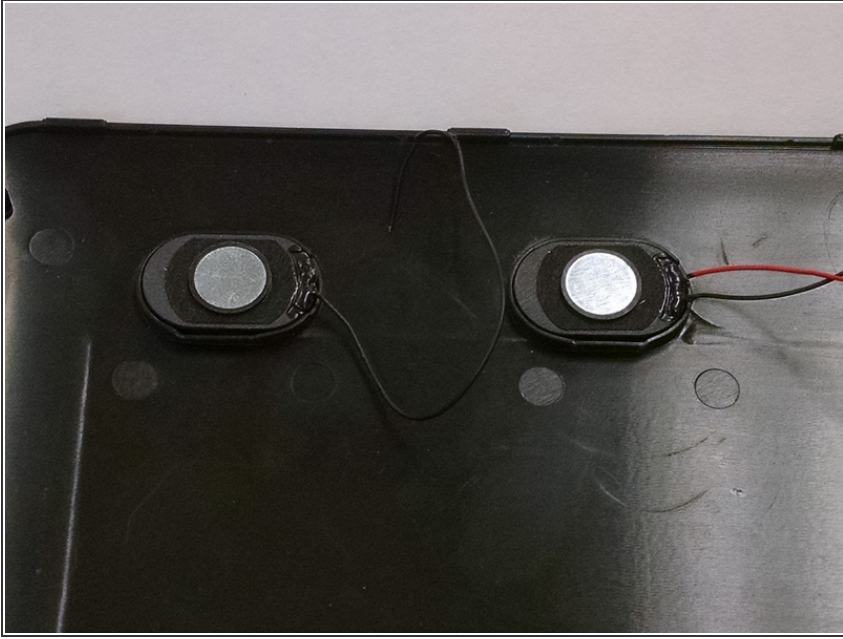

- Glue the speakers flat against their respective sound output panels with the silver sides facing out/towards the interior of the tablet.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-29 10:42:51 AM.